

Updating Wytron Controller Firmware

All Wytron controllers to date (*Sep. 2002*) update with the same procedure.

Download latest firmware from <http://www.wytron.com.tw/chinese/upgrade.htm> or save the attachment from your e-mail. Updates are usually in ZIP format which you will have to decompress with a utility such as Winzip (<http://www.winzip.com/>). The resulting BIN file needs to be burned onto a cd using a program like Roxio *EZ CD-Creator*. Any will do, however, *it is important that the disc session be closed or "finalized"*.

1. Apply power. The current version of the firmware will be displayed briefly. Wait for the controller to boot completely. The display should read "copy".
2. Hold down the "Mode" button until you hear a rapid beep.
3. Press the Mode button until the display reads "update". Insert the cd with the firmware update into the CD-ROM and close the tray.
4. The update will begin. If the process fails or does not begin, the cd you made may not have been closed properly, or the firmware already installed is newer than your update.
5. When the update is finished, the controller – depending on the model – will either ask you to restart it (turn off and reapply power), or restart itself. Wait for the controller to boot up again completely. It may take longer than usual following an update. The firmware version will be displayed briefly as the controller boots up. Verify that it is a newer version.

Note: After a firmware update, any settings you may have changed in the "setup" menu will be reset to the defaults.

*Essential Data, Inc.
September 5, 2002
-RS*